



## Taking measurements of blinds

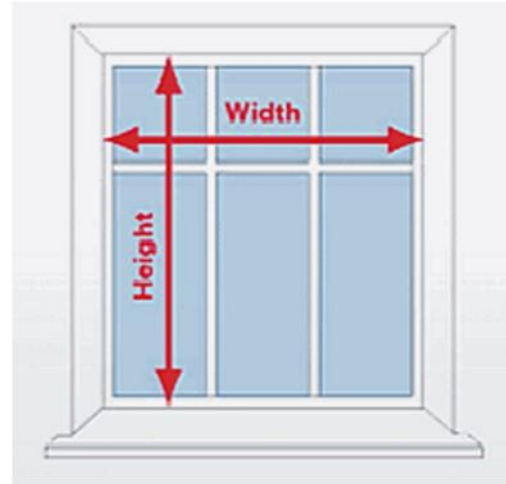

Inside the recess

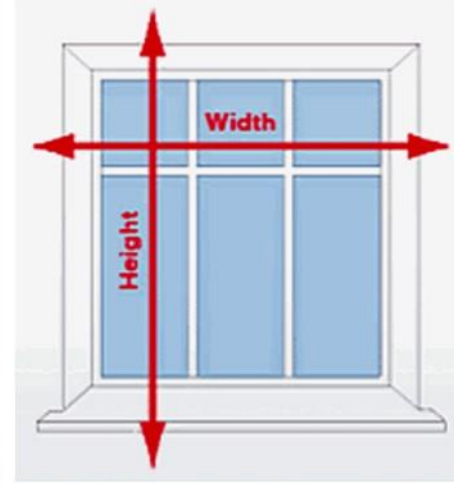

Outside the recess

1. Always use a metal tape for measurement.
2. Write down your measurements width\*drop.
3. Take measurements in centimeters for more accuracy.
4. Measure every window, as sometimes they have a slight variation that will affect the perfect fitting of blinds.
5. Add at least 10cm to the blind width & drop if it is to be installed outside the window recess..
6. Decide the operation of the blind to be on the left or right hand side.
7. Make sure you have enough depth to mount the blind inside the frame. Minimum 8cm depth is required for the blinds with top cassette and 6cm for without cassette. A lesser depth will result in the blind protruding out of the frame.
8. Look out for protruding window handles and tiles.

## Installation on the wall

Screw up the L-bracket on wall



Hook up the snap clip with L-bracket and twist



Insert backside of headrail in snap clip and push from front to adjust

Use extra brackets and clips for wider width blinds



## Installation in roof

Screw up the Snap Clip directly in the roof without L-bracket

